


VIRUS ARMOR

UV-C Floor Model Sterilizer- 120W

www.virusarmor.com

4924 Cambridge Rd,
Fort Worth, Texas, 76155, USA
1 855-929-8879

orders@virusarmor.com

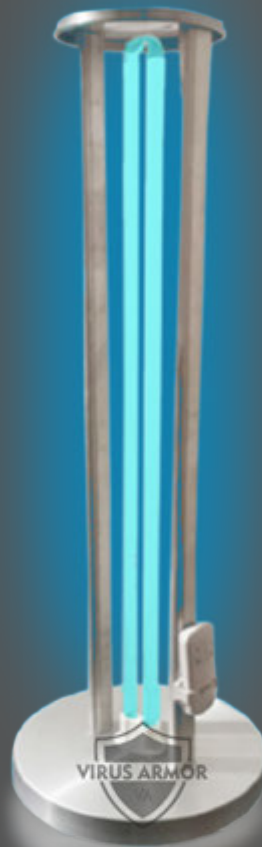

UV-C FLOOR MODEL STERILIZER- 120W
EPA REGISTERED

UV-C FLOOR MODEL STERILIZER- 120W



Features

- Remote Controlled.
- Aluminum Frame.
- 3 Timer Settings.
- Kills Viruses, Bacteria & Germs.



ON



OFF

Protects you from Viruses, Bacteria, and Germs in Bedrooms, Living Rooms, Waiting rooms, Offices, Classrooms, etc



1. Set sterilization mode and time



2. Press the start switch, after that leave the sterilizing area with in 10 seconds or leave the place first and power on the lamp using remote control.



3. Wait till the sterilization process is over.



4. You can use the purified room once the sterilization process is over.

WARNING & SAFETY

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Please put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.
- **DANGER:** Risk Group 3 Ultra Violet product. These lamps emit high power UV radiation that can cause severe injury to skin and eyes. Avoid eye and skin exposure to unshielded product. Use only in an enclosed environment that shields users from the radiation.
- Lamp contains mercury. Manage in Accord with Disposal Laws.