


VIRUS ARMOR

UV-C Tube Sterilizer

www.virusarmor.com

4924 Cambridge Rd,
Fort Worth, Texas, 76155, USA
1 855-929-8879

orders@virusarmor.com

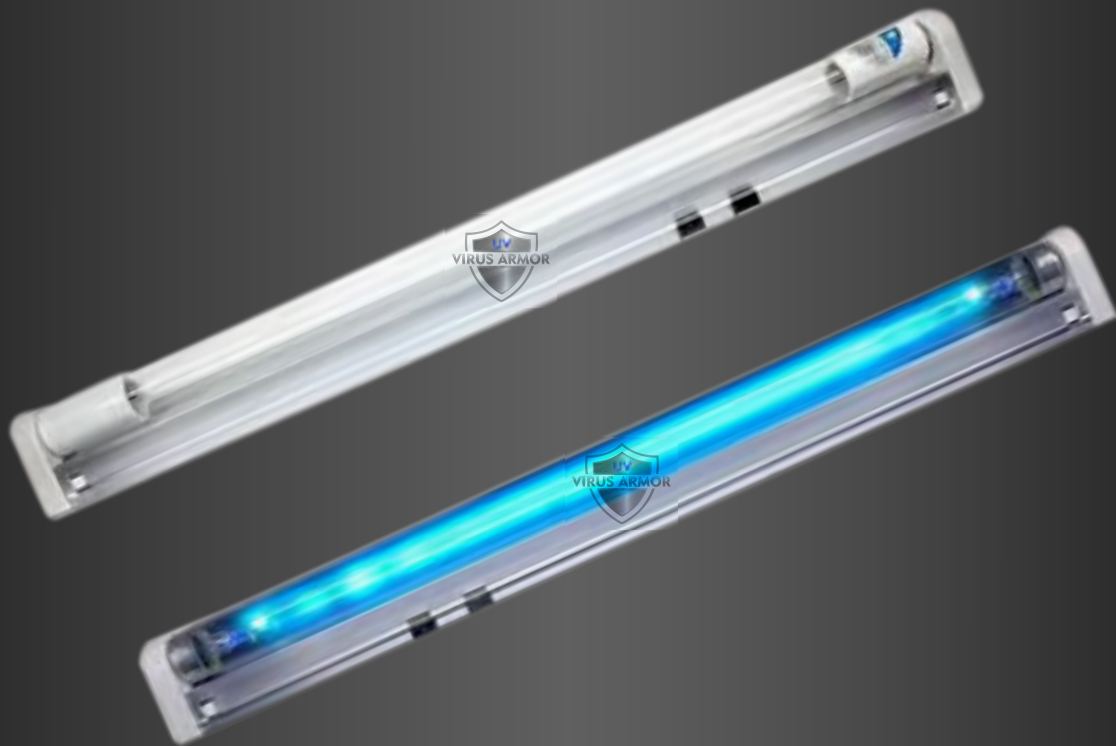

UV-C TUBE STERILIZER
EPA REGISTERED

UV-C TUBE STERILIZER



Features

- Sterilizes in minutes.
- Directly connects power supply.
- UV Resistant Fixture, aluminum alloy.
- Ceramic lamp holder, insulating material.
- 4ft tube disinfects 430 Square.Feet.
- 2ft tube disinfects 215 Square.Feet.

Product Specifications

Wattage:	20W,	40W
Tube Length / Fixture Length:	2ft,(special order)	4ft
Voltage:	110V	
Barometer:	177 mbar	
Light Spectrum:	UV-C 254 nm	
Lamp-holder/Tube Diameter:	G13/15mm(T5)	
Lamp Material:	Quartz Glass	
Fixture Material:	Aluminum Alloy	

Protects you from Viruses, Bacteria, and Germs in classrooms, offices, hospital rooms, retail spaces



Operating

1. Press the switch to start. The default disinfection time is 15 minutes.
2. After the disinfection time is completed the ultraviolet lamp will automatically turn off.

WARNING & SAFETY

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Please put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.
- **DANGER:** Risk Group 3 Ultra Violet product. These lamps emit high power UV radiation that can cause severe injury to skin and eyes. Avoid eye and skin exposure to unshielded product. Use only in an enclosed environment that shields users from the radiation.
- Lamp contains mercury. Manage in Accord with Disposal Laws.